

BMS Loop Controls

BMS user interface: "enable loopoc"
This turns the LP1 and LP2 inputs into switches to ground in response to HVC and LVC conditions, and can operate relays as shown.

