WHITE-RODGERS DC PRODUCTS

Type 124

solenoid

FEATURES

- · Double-make or double-break contacts
- Steel enclosure
- · Offers high and low current capabilities
- · Isolated or grounded coils

ENGINEERING DATA

Contacts

- Pole form—SPNO, SPNC and SPDT
- Material-silver alloy
- Termination

 ⁵/₁₆"-24 UNF-2A thread

RATINGS					
	NO		NC		
Volts DC	Cont.	Inrush	Cont.	Inrush	
6	100A	400 A	50A	200 A	
12	100 A	400 A	50 A	200 A	
24 & 36	100 A	400 A	50 A	100 A	

Coils

- Voltage–6 VDC through 48 VDC
- Termination-#10-32 UNF-2A thread
- Power (approximate)
 Continuous 12 watts

 Intermittent 24 watts
- Connections
 - 1. Coil isolated (two terminals)
 - One coil lead grounded to case (one terminal)
- Operate (77°F/25°C)
 75% of nominal coil voltage
 110% max. safe of nominal coil voltage

COIL DATA					
	Resistance in Ohms				
Volts DC	Intermittent	Continuous			
6	1.7	3.3			
12	6.6	13.2			
15	10.2	21.0			
24	26.0	53.0			
36	59.0	120.0			
48	105.0	213.0			



GENERAL DATA

Dielectric Strength

• 500 Volts

Temperature Range

• -40°F/-40°C to 149°F/65°C

Mechanical Life (no load)

• 100,000 operations

Electrical Life (rated load)

• 50,000 operations

Mounting Position

 Recommended mounting is vertical plane with coil terminals up

Weight (approximate)

- SPNO-16.0 oz.
- SPDT-19.0 oz.

Duty Cycle


- Continuous
- Intermittent—10 seconds "on" maximum and minimum 60 seconds "off"
 One minute "on" maximum and minimum 6 minutes "off"

Hardware Torque Specification

- Contact Terminal: 60 inch-lbs. max.
- Coil Terminal: 12-18 inch-lbs.



TYPE 124 PART NUMBERING SYSTEM

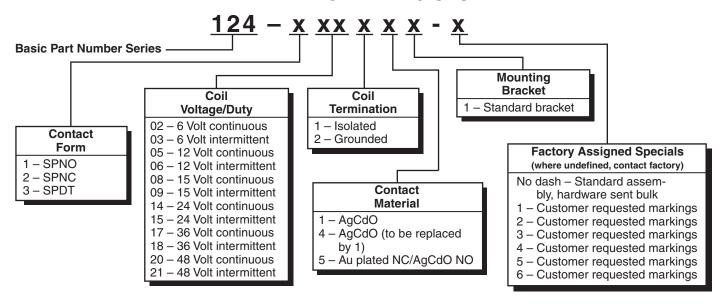

APPLICATION NOTES

- · Not all part number combinations are available. Please contact your Sales Representative for available part numbers.
- Solenoids applied in battery charging circuits should be protected from higher than rated voltage during charging. The service life may be affected by this condition and the solenoid may or may not operate the circuit as intended.
- Circuits should be designed to provide safe operation should the solenoid fail in either the open or closed position.
- A back-up wrench must be used to hold the bottom nut stationary during installation.

